BRIGHTBLU

BRIGHTBLU JOLT Control App

- Introduction



HOME

Connection Type: Shows the current connection type - Wi-Fi or Bluetooth.

Device ID: Shows your charger's unique model number.

Time Elapsed: Displays how long your vehicle has been charging.

Total Energy Consumed: Displays the total energy used in kWh.

Charger Status: Provides real-time charger status update.

Voltage (In Volts): Displays the voltage output of the charger.

Current (In Amps): Shows current charger output with limit-setting option.



STATS

Gain access to detailed stats on your charger's energy usage. Including weekly and monthly data to track usage trends over time.

1. Last Activity:
Access details of the latest charging session, including duration, energy consumption and date.

2. Lifetime Stats:
View your total energy used, CO_2 emissions saved, and fuel savings.



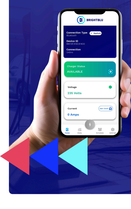

Set Current Limit

1. Scroll to the bottom of the Home screen.
2. Tap **"Set Limit"** to define the maximum current for charging.

3. After tapping **"Set Limit"**, confirm by selecting **"Proceed"**.

4. Set the desired maximum current limit.

Note: For further assistance or inquiries regarding additional features, please reach out to our customer support team.

SETTINGS

Access configuration and management options to personalize your charging experience. Select preferred chargers, update firmware, and manage user profiles.



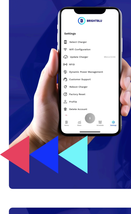

1. Select Charger: Add or select preferred chargers for charging your electric vehicle.

2. Wi-Fi Configuration: Connect your charger to Wi-Fi for remote monitoring and control.

3. Update Charger: Keep your charger updated with the latest firmware for new features.

4. RFID: Use RFID card to connect to the charger for added security.

5. Customer Support: Email our customer support for any help.

6. Reboot Charger: Quickly reboot your charger to fix issues.

7. Factory Reset: Reset your charger's settings to factory defaults.

8. Profile: Customize your user profile to personalize your app experience.

9. Delete Account: Remove your account and all your chargers added.

10. Logout: End your current session securely for privacy and security.



BRIGHTBLU

Getting Started with Your JOLT EV Charger

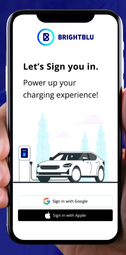

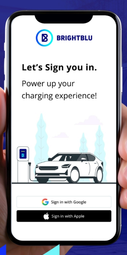

Download and Install the App.

Sign Up: If you're a new user, you can sign in using your Google account by tapping on **"Sign-in with Google"** or **"Sign-in with Apple"** and follow the prompts.

Verify Your Account (if required).

Navigate to "Add Charger".

In the app, tap **"Click here to add your charger"** from the main home-screen menu.

Follow On-screen Instructions.

Follow the app's step-by-step prompts to add a charger. Ensure you allow Bluetooth permission for the app to connect.

Choose Your Charger Model.

Select your charger model from the list. The model ID can be found on the right side of the charger.

Review Your Selection.

- Verify that you've selected the correct charger model.
- Ensure the model number matches your choice.

Confirm Your Selection.

- Once confirmed, tap **"Yes"** to finalize your selection.

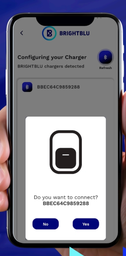

Choose Connection Mode.

- Select either **"Wi-Fi"** or **"Bluetooth"** based on your preference.
- Consider network availability and charger proximity.

Follow On-screen Instructions.

- Follow the app's instructions for connecting your charger.
- Adhere closely to these instructions for a successful connection.

Note: Ensure that your mobile device has the necessary permissions (e.g., location access for Bluetooth) to facilitate the connection process. If you encounter any issues during this step, refer to the app's troubleshooting guide or contact customer support for assistance.

BRIGHTBLU

Control your Charger via RFID

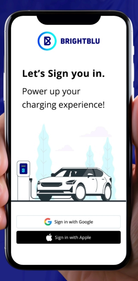

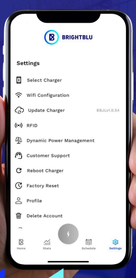

Access Settings

To configure your charger with an RFID card, go to the **'Settings'** menu in the JOLT Control App and select RFID.

Adding RFID

Click on the **'+'** sign to scan and add your RFID card by placing it near the charger's RFID reader.

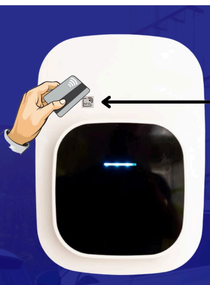

Tap the RFID card

Hold the card close to the charger's RFID reader until you hear a buzzer sound, indicating successful registration. Ensure the card firmly touches the reader for proper detection.

Configure and Add RFID

Once the RFID card is detected, follow the app's on-screen instructions to add and configure the card in your charger's settings.

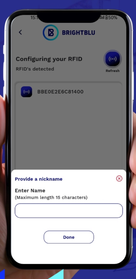

Select a Nickname

Provide a nickname for the RFID card during setup. Choose a memorable name, especially if you have multiple cards.

Configure and Start Charging

After configuration, use the card to start charging by tapping it on the reader. The charger will recognize the card and initiate charging.

Note: If you have lost your RFID Card, please contact Brightblu to issue a new one.

BRIGHTBLU

Schedule Charging and PLUG & PLAY

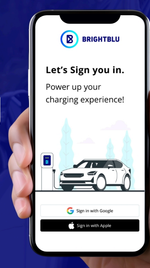

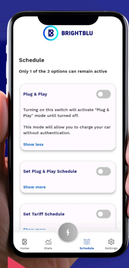

PLUG & PLAY

Turning on this switch will activate **"Plug and Play"** mode until turned off.

This mode will allow you to charge your car without authentication.

SET PLUG & PLAY SCHEDULE

Turning on this switch will activate **"Plug and Play"** mode for the selected period of time.

Outside this time period only authorised users can use the charger.

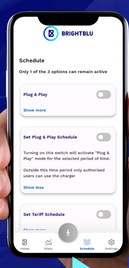

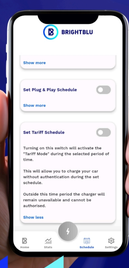

SET TARIFF SCHEDULE

Turning on this switch will activate **"Tariff"** mode during the selected period of time.

This will allow you to charge your car without authentication during the set schedule.

Outside this time period the charger will remain unavailable and cannot be authorised.

Note: The **"Schedule"** feature puts you in control of your charging routine, offering flexibility, convenience, and peace of mind as you manage your electric vehicle's energy needs.

© 2024 BRIGHTBLU INDIA PRIVATE LIMITED. All rights reserved.

This App User Guide and the accompanying screenshots are proprietary to BRIGHTBLU. No part of this user guide or the screenshots may be reproduced, stored, or transmitted without prior written permission.

BRIGHTBLU reserves the right to make changes to this user guide and screenshots at any time, without notice. The information provided is believed to be accurate and reliable, however, BRIGHTBLU assumes no responsibility for its use or any infringements of third-party rights.

BRIGHTBLU India Private Limited
HQ: Pune, Maharashtra